



## **Technical Datasheet for** **Disinfection mat and Disinfection mat accessible**


To ensure optimum function of the walk-on disinfection mat that can be walked on and please observe the following instructions:

- Before first use, the protective film on the anti-slip back coating must be removed.
- To maintain maximum floor adhesion, the disinfection mat should generally be placed on dry and clean ground. If the adhesion of the back coating wears off, simply wash it off with warm water and a mild detergent and allow it to dry thoroughly before replacing the mat.
- Always move the disinfection mat at a walking pace.
- The fork of the forklift, pallet truck or ant should always be in a slightly elevated position for driving over the disinfection mat.
- Braking or turning on the disinfection mat must be avoided at all costs.
- Not suitable for outdoor use or for laying out and driving over on slopes.
- Avoid heavy soiling on the disinfection mat. These should be removed in advance by cleaning.
- The disinfection mats are not bound to any disinfectant. The agent used should have a bactericidal and fungicidal effect. For use in food processing plants, we recommend a disinfectant that is effective against listeria, such as BTS 2001®, BTS 2500® or Virodrex® from bio tec GmbH. Blue Level GmbH does not assume any liability / warranty for possible floor-specific color or other changes caused by the disinfectants used. Depending on its size, the mat should be filled with 2 to 11 liters of a 1 to 3 % disinfectant solution. Due to use and evaporation, regular refreshing is required as soon as no liquid is visible when stepping on the mat. Minimal accumulation of condensation below the mat is possible.

### **Filling:**

<b>Dimension approx.</b>	<b>Dimension in m<sup>2</sup></b>	<b>Average filling in liters:</b>
60 x 90	0,54	2,00
90 x 120	1,08	4,00
90 x 150	1,37	5,00
90 x 180	1,64	6,00
90 x 240	2,16	8,00
90 x 300	2,75	11,00

**Blue Level GmbH**  
Säntisstrasse 17  
CH-8280 Kreuzlingen  
Switzerland

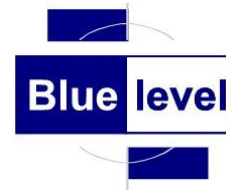

eShop: [www.schuhputzmaschine.ch](http://www.schuhputzmaschine.ch)  
eMail: [info@bluelevel.ch](mailto:info@bluelevel.ch)

### **Refreshing:**

<b>Type of Loading</b>	<b>Frequency of Mat</b>	<b>Mat Refreshment</b>
Low organic load	Low / High	1 time daily / 2 times daily
Moderate organic load	Low / High	2 times daily / 3 times daily
High organic load	Low / High	3 times daily / 4 times daily

The disinfection mats are economical in use and effective in cleaning. It is usually sufficient to rinse the standing mat thoroughly with water and a mild detergent or disinfectant, e.g. with a high-pressure cleaner at low pressure and at an appropriate distance. Then squeeze thoroughly and let dry well, depending on the mat size we recommend 24 to 72 hours. In the meantime, a replacement mat should be laid out. In the case of 3-shift operation, we strongly recommend that the mat used be changed daily. In addition, a regular test of the mat should be carried out.